

Automatic vent devices do not last indefinitely, so remove the vent every couple of years and check its operation. With the vent in hand, its spring-loaded diaphragm should be held firmly against its seat. If the diaphragm is down even slightly, or if the rubber has deteriorated, install a whole new unit.

Replacing an S-Trap

